


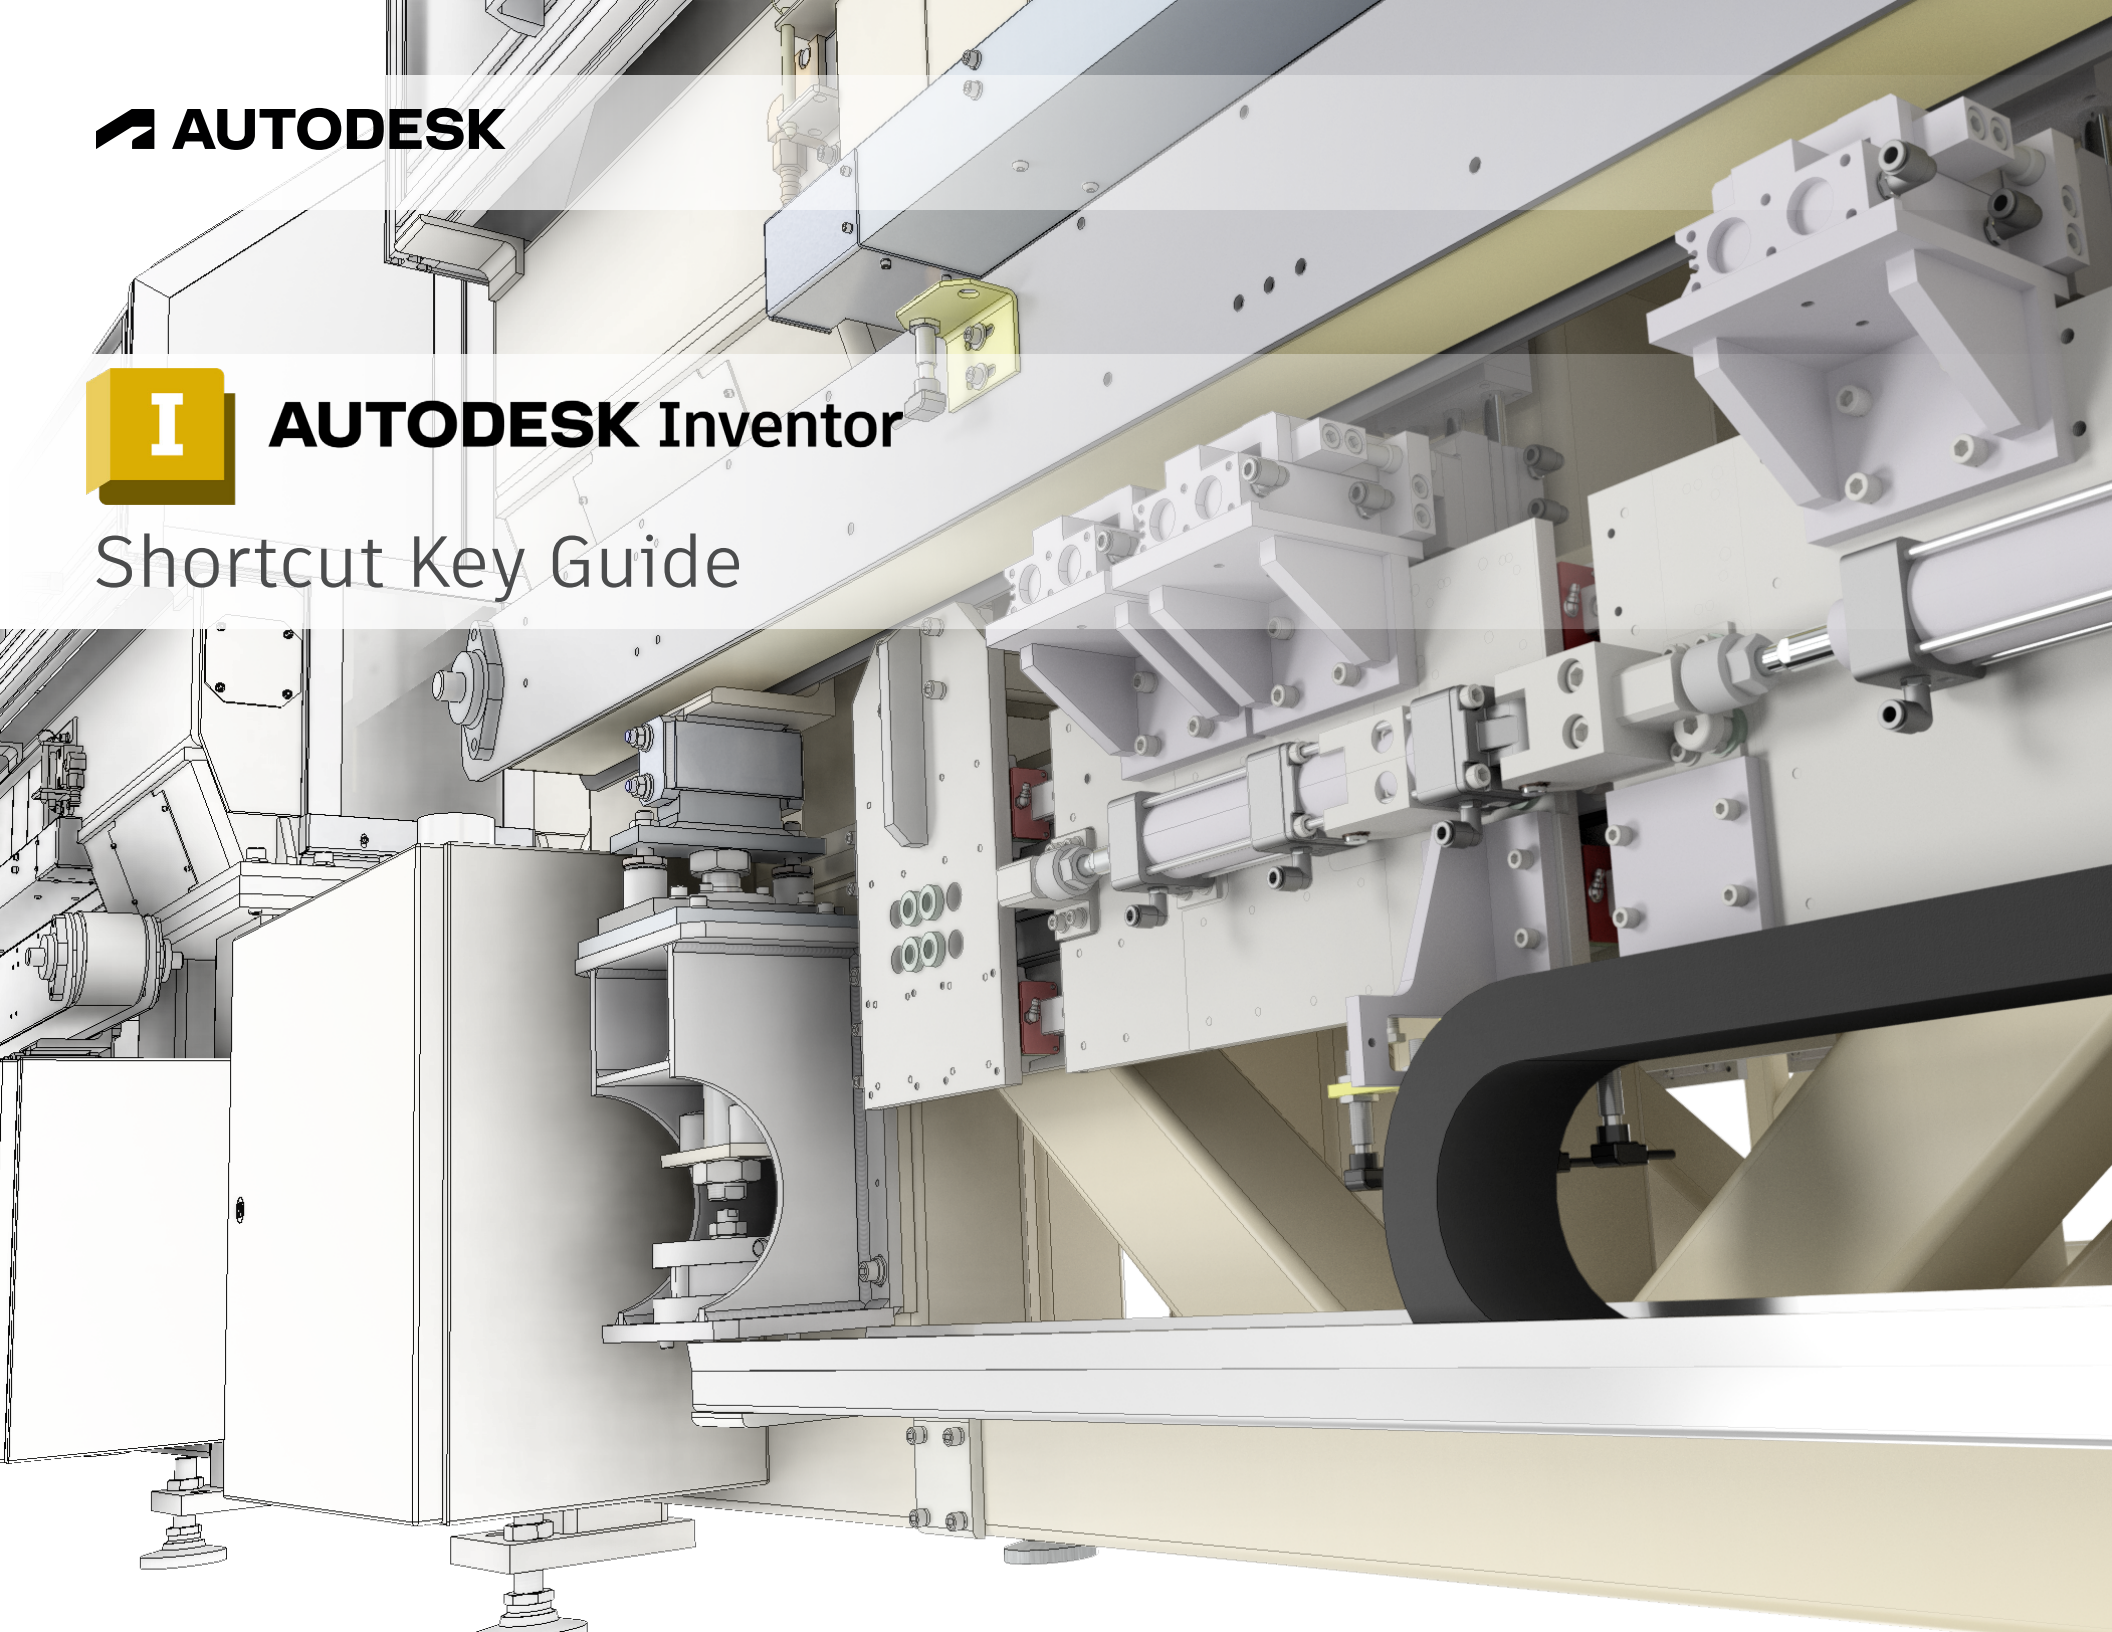

AUTODESK Inventor

Shortcut Key Guide



One Key Shortcuts

Keyboard Diagram	3
Printable Keyboard Stickers.....	14

Keyboard Shortcut Commands by Category

Assembly.....	4
Drawing Manager	4
General	4
Part.....	4
Placed Features.....	4
Sketch	5
Tools.....	5
View.....	5
Work Features.....	5

Multi-Character Command Aliases by Category

Annotation.....	6
Assembly.....	6
Cable & Harness.....	6
Dimension.....	7
Drawing Manager	8
Dynamic Simulation.....	8
Frame Analysis	8
Mold Design	9
Part.....	10
Placed Features.....	11
Presentation	11
Sheet Metal.....	11
Sketch.....	11
Sketch Features.....	12
Stress Analysis	12
Tools.....	13
Tube & Pipe	13
View.....	13

NOTE: To enable the use of multi-character command aliases in Inventor, make sure the “Use default multi-character Command Aliases” option is checked. To access this, select Tools tab ► Options panel ► Customize, and click the Keyboard tab.

	CANCEL	HELP	PAN	ZOOM SELECTED	ROTATE	PREVIOUS VIEW	HOME VIEW	SLICE GRAPHICS	SHOW ALL CONSTRAINTS	HIDE ALL CONSTRAINTS	SKETCH VISIBILITY							
	Esc	F1	F2	F3	F4	F5	F6	F7	F8	F9	F10	F11	F12	PrtScn SysRq	ScrLK	Pause Break		
~	! 1	@ 2	# 3	\$ 4	% 5	^ 6	& 7	* 8	(9) 0	- =	Backspace	Home	End ZOOM SELECTED				
Tab	Q	W	E	R	T	Y	U	I	O	P	{ [WORK PLANE	\	Insert	Page Up LOOK AT				
Caps Lock	A	S	D	F	G	H	J	K	L	GROUND WORK POINT ;	,"	Enter	Delete DELETE	Page Down				
Shift	Z	X	C	V	B	N	M	< ,	WORK POINT .	WORK AXIS /	Shift	▲						
Ctrl	Start	Alt							Alt		Ctrl	◀	▼	▶				

= EQUAL / Constrains curves to equal radius or length.

; GROUNDED WORK POINT / Creates a grounded work point and activates the 3D Move/Rotate tool.

/ axis. WORK AXIS / Creates a new work axis.

] WORK PLANE / Creates a new work plane.

. WORK POINT / Creates a new work point.

DELETE DELETE / Removes the selected item from the model or drawing.

END ZOOM SELECTED / Zooms in on a specifically selected item.

ESC CANCEL / Closes the active tool.

HOME ZOOM ALL / Zooms to the extents of all objects in the graphics window.

PAGE UP LOOK AT / Looks at a selected entity.

Assembly

- ALT-DRAG MOUSE
MATE CONSTRAINT / Applies a mate constraint.
- CTRL-H
REPLACE COMPONENT / Replaces one assembly component with another component.
- SHIFT-TAB
PROMOTE / Removes a part from a subassembly and makes it an individual part in the parent assembly.

Drawing Manager

- CTRL-SHIFT-N
NEW SHEET / Inserts a new drawing sheet.
- CTRL-SHIFT-T
LEADER TEXT / Adds notes with leader lines to a drawing.

General

- CTRL-A
SELECT ALL / Selects everything on the screen.
- CTRL-C
COPY / Copies selected items.
- CTRL-F
FIND / Presents the Find Part Sketches dialog box in part files; opens the Find Assembly Components dialog box in assembly files.
- CTRL-N
NEW / Displays the New File dialog box.
- CTRL-O
OPEN / Displays the Open dialog box, to open an existing file.
- CTRL-P
PRINT / Displays the Print dialog box.
- CTRL-S
SAVE / Displays the Save As dialog box.
- CTRL-V
PASTE / Pastes a cut or copied item from one location to another.
- CTRL-X
CUT / Cuts selected items.
- CTRL-Y
REDO / Redoes previously undone commands.
- CTRL-Z
UNDO / Undoes the effects of commands.
- DELETE
DELETE / Removes the selected item from the model or drawing.

- QUIT EXIT / Quits the application; prompts to save documents.
- SHIFT-RIGHT MOUSE CLICK
SELECT / Activates the select command menu.

Part

- CTRL-SHIFT-K
CHAMFER / Activates the Chamfer tool.
- CTRL-SHIFT-L
LOFT / Activates the Loft tool.
- CTRL-SHIFT-M
MIRROR / Activates the Mirror tool.

Placed Features

- CTRL-SHIFT-O
CIRCULAR PATTERN / Opens the Circular Pattern dialog box.
- CTRL-SHIFT-R
RECTANGULAR PATTERN / Opens the Rectangular Pattern dialog box.
- CTRL-SHIFT-S
SWEEP / Activates the Sweep tool.

Sketch

=	EQUAL / Constrains curves to equal radius or length.
F7	SLICE GRAPHICS / Slices away temporarily the portion of the model that obscures the plane.
F8	SHOW ALL CONSTRAINTS / Displays all constraints.
F9	HIDE ALL CONSTRAINTS / Hides All constraints.

Tools

ALT-F8	MACROS / Opens the Macros dialog box.
ALT-F11	VISUAL BASIC EDITOR / Launches the Microsoft Visual Basic Editor.
ESC	CANCEL / Closes the active tool.
F1	HELP / Opens the Inventor help files.

View

ALT-	USER WORK POINTS VISIBILITY / Makes work points visible.	F5	PREVIOUS VIEW / Returns to the last display.
ALT-]	USER WORK PLANE VISIBILITY / Makes work planes visible.	F6	HOME VIEW / Rotates objects in the graphics window into an isometric orientation.
ALT-/	USER WORK AXES VISIBILITY / Makes work axes visible.	F10	SKETCH VISIBILITY / Makes sketches visible.
CTRL-	ORIGIN POINTS VISIBILITY / Makes the default origin points visible.	HOME	ZOOM ALL / Zooms to the extents of all objects in the graphics window.
CTRL-]	ORIGIN PLANE VISIBILITY / Makes the default origin planes visible.	PAGE UP	LOOK AT / Looks at a selected entity.
CTRL-/	ORIGIN AXES VISIBILITY / Makes the default origin axes visible.	SHIFT-F3	ZOOM WINDOW / Zooms to the area you define with a window.
CTRL-O	TOGGLE SCREEN / Toggles screen.	SHIFT-F5	NEXT VIEW / Advances to the next view.
CTRL-SHIFT-E	DEGREES OF FREEDOM / Displays degrees of freedom.	SHIFT-MIDDLE MOUSE CLICK	ROTATE / Rotates a model.
CTRL-SHIFT-Q	IMATE GLYPH / Activates the iMate Glyph tool.		
CTRL-W	STEERING WHEELS / Displays the Steering Wheel view tool.		
END	ZOOM SELECTED / Zooms in on a specifically selected item.		
F2	PAN / Views areas of the graphics window. (You must hold the [F2] key down.)		
F3	ZOOM SELECTED / Realtime zoom in and out of the graphics window. (You must hold the [F3] key down.)		
F4	ROTATE / Rotates objects in the graphics window.		
		;	GROUNDING WORK POINT / Creates a grounded work point and activates the 3D Move/Rotate tool.
		/	WORK AXIS / Creates a new work axis.
]	WORK PLANE / Creates a new work plane.
		.	WORK POINT / Creates a new work point.

Work Features

Annotation

BA	AUTO BALLOON / Creates one or more item balloons used to identify components in drawing views.
CAT	CATERPILLAR / Adds a weld caterpillar annotation.
CB	CENTERLINE BISECTOR / Adds a centerline bisector.
CL	CENTERLINE / Adds a centerline.
CM	CENTER MARK / Adds a center mark.
DI	DATUM IDENTIFIER SYMBOL / Adds a datum identifier symbol.
EF	END FILL / Adds a weld end fill annotation in a drawing view or on a 3D weld bead to represent the hatched or filled region indicating the end of a weld bead.
F	FEATURE CONTROL FRAME / Places a feature control frame in drawing files.
FI	FEATURE IDENTIFIER SYMBOL / Adds a feature identifier symbol.
HTF	HOLE TABLE-FEATURES / Selects feature set (all punch center instances from a single feature).
HTS	HOLE TABLE-SELECTION / Selects recovered punch centers individually.
HTV	HOLE TABLE-VIEW / Adds a hole table to a view.
LE	LEADER TEXT / Adds notes with leader lines to a drawing.
PL	PARTS LIST / Creates a parts list.
RT	REVISION TAG / Adds revision tags to a drawing.

RTB	REVISION TABLE / Creates a revision table.
ST	SURFACE TEXTURE SYMBOL / Adds a surface texture symbol.
SY	SYMBOLS / Adds sketched symbols to a drawing sheet.
T	TEXT / Activates the text tool in a drawing file.
TB	TABLE / Creates a table.
WS	WELDING SYMBOL / Provides annotation and acts as a grouping mechanism by referencing multiple beads with a single welding symbol.

RA	REPLACE ALL / Replaces all occurrences of the component in the current assembly.
V	MOVE COMPONENT / Activates the Move Component command.

Cable & Harness

AR	AUTOMATIC ROUTE / Automatically routes one or more selected wires into segments based on the shortest path through the network and the segment opening that is closest to the wire start and endpoints.
BR	CHECK BEND RADIUS / Checks for bends that do not meet the specified minimum bend radius on segments, and routed and unrouted wires and cables in the active harness assembly.
BS	BROKEN SKETCH ENTITY / Sets the start point and endpoint for the length to remove from the cable, wire, or segment.
CA	CONNECTOR AUTHORIZING / Adds Cable and Harness-specific data to complete the definition of connectors for use in Cable and Harness.
CC	CREATE CABLE / Creates a cable containing multiple wires that are connected or terminated to selected pins within a harness assembly.
CF	CREATE FOLD / Creates fold.
CR	CREATE RIBBON CABLE / Creates a ribbon cable between a start and end connector.

Assembly

C	CONSTRAINTS / Adds an assembly constraint.
CO	COPY COMPONENTS / Creates a copy of the component.
G	ROTATE COMPONENT / Activates the Rotate tool.
IA	ANALYZE INTERFERENCE / Analyzes assemblies for interference.
MI	MIRROR COMPONENTS / Creates a mirror component.
N	CREATE COMPONENT / Displays the Create In-Place Component dialog box.
P	PLACE COMPONENT / Places a component in the current assembly.
PC	PATTERN COMPONENT / Selects one or more components to include in the pattern.

CS	CREATE SEGMENT / Creates a harness segment.	P	PIVOT / Fixes segment points so you can drag the selected segment relative to that fixed point.*	CN	CHAMFER NOTE / Adds a chamfer note to a drawing view.
CV	PLACE CONNECTOR VIEWS / Places connector views.	P	PLACE PIN / Places a pin.*	D	GENERAL DIMENSION / Adds a dimension to a sketch or drawing.
CW	CREATE WIRE / Creates a wire between selected pins within a harness assembly.	PD	PROPERTY DISPLAY / Displays properties for the selected objects.	HN	HOLE/THREAD NOTES / Adds a hole or thread note with a leader line.
E	EDIT / Edits nailboard sketch.	PG	PLACE PIN GROUP / Automatically places multiple pins with the specified naming, configuration, and orientation on a part.	O	ORDINATE DIMENSION SET / Activates the Ordinate Dimension Set command.
EH	EXPORT HARNESS DATA / Exports harness data.	RG	REPORT / Process reports for the active harness assembly.	OD	ORDINATE DIMENSION / Adds an ordinate dimension.
F	FAN IN / Collapses wire stubs on top of one another to reduce the detail or clutter in nailboard documentation.	RH	REVIEW HARNESS DATA / Reviews harness data.	PN	PUNCH NOTES / Creates a punch note.
FO	FAN OUT / Equally distributes wire stubs about the endpoint of a segment using the specified angle and sorting direction.	RT	ROUTE / Routes cables and wires manually.		
HA	CREATE HARNESS / Adds the harness subassembly to an assembly file with the specified name and location, and displays the Cable and Harness tab.	RW	RECONNECT WIRE PINS / Reconnects wire pins.		
HD	HARNESS DIMENSION / Adds a driven, aligned dimension between 2 points.	SP	CREATE SPLICE / Creates a splice.		
HP	HARNESS PROPERTIES / Custom properties of harness components.	TB	TABLE / Creates a table.	AV	AUXILIARY VIEW / Places an auxiliary view by projecting from an edge or line in a parent view.
IH	IMPORT HARNESS DATA / Imports harness data.	U	UNROUTE / Unroutes selected wires from selected segments.	B	BALLOON, BOM / Activates the Balloon tool or displays the BOM Properties dialog box, depending on the work environment.
L	CABLE & HARNESS LIBRARY / Adds new library definitions, and modifies, copies, and deletes existing library definitions for harness objects such as wires, cables, raw ribbon cables, and virtual parts.	V	ASSIGN VIRTUAL PARTS / Assigns virtual parts.	BV	BASE VIEW / Creates a base view.
NB	NAILBOARD / Specifies the harness assembly and setup to create or edit a nailboard view.			BRV	BREAK / Creates a broken, foreshortened view.
				BO	BREAK OUT / Removes a defined area of material to expose obscured parts or features in an existing drawing view.

Drawing Manager

Dimension

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

CR	CROP / Use to set boundary type and visibility of crop cut lines for crop operations.
DV	DETAIL VIEW / Provides circular and rectangular shapes of detail profile.
PV	PROJECTED VIEW / Creates a projected view.
RD	RETRIEVE DIMENSIONS / Retrieves model dimensions in a drawing.
SV	SECTION VIEW / Creates a section view.

Dynamic Simulation

AVI	PUBLISH MOVIE / Creates AVI animation.
CC	CONVERT ASSEMBLY CONSTRAINTS / Converts assembly constraints.
CSA	PUBLISH TO STUDIO / Creates studio animation.
DM	DYNAMIC MOTION / Dynamic part motion.
F	FORCE / Applies force on the selected objects.
FEA	EXPORT TO FEA / Exports to FEA.
J	INSERT JOINT / Inserts joint.
MS	MECHANISM STATUS AND REDUNDANCIES / Provides model status information and guides you through the process of repairing redundant constraints.

OG	OUTPUT GRAPHER / Displays graphs and numerical values of all the input and output variables in a simulation during and after the simulation completes.
RF	REFERENCE FRAME / Creates a Reference Frame from the input provided.
SET	DYNAMIC SIMULATION SETTINGS / Sets options that apply to the entire Dynamic Simulation session.
TO	TORQUE / Applies torque on the selected objects.
TR	TRACE / Creates the absolute or relative kinematic values (trajectory, velocity, and acceleration) of one or more points placed anywhere on a component.
UF	UNKNOWN FORCE / Calculates the required force, torque, or jack to keep a mechanism in static equilibrium for a given position

Frame Analysis

A	ANIMATE RESULTS / Animates the selected simulation results.
AM	AXIAL MOMENT / Adds an axial moment.
B	PROBE / Displays the simulation results for a specific point on the model.
BC	BOUNDARY CONDITIONS / Toggles display of all boundary conditions.
BD	BEAM DETAIL / Displays detailed results (diagrams, tables) for the selected beams of a structure.
BM	BENDING MOMENT / Applies the bending moment to the selected beam.

C	CREATE SIMULATION / Creates a simulation.
CB	COLOR BAR / Edits color bar.
CL	CONTINUOUS LOAD / Applies and distributes uniform load along the beam you select.
D	DIAGRAM / Adds custom user diagram.
EX	EXPORT / Exports to robot structural analysis.
F	FORCE / Applies a force of the specified magnitude to the selected faces, edges, or vertices.
FL	FLOATING PINNED CONSTRAINT / Adds floating pinned constraint.
LB	BEAM LABELS / Toggles display of beam labels.
LN	NODE LABELS / Toggles display of node labels.
LP	PROBE LABELS / Toggles visibility of probe labels.
LS	LOCAL SYSTEMS / Toggles display of beam local systems.
LV	LOAD VALUES / Toggles display of load values.
MA	BEAM MATERIALS / Enables you to change the material of the beam.
MO	MOMENT / Applies the general moment to the selected beam.
N	NO SHADING / Turns off the Shaded Results display.
P	BEAM PROPERTIES / Provides physical and engineering properties of a frame member, and enables you to customize the data.

PN	PINNED CONSTRAINT / Applies pinned constraint when no displacement and free rotation is allowed on beam or node.	BC	BRIDGE CURVE / Connects curves by G2 continuity.	EJ	EJECTOR / Creates an ejector pin to eject a plastic part.
R	REPORT / Generates a report.	BL	MOLD BOOLEAN / Integrates the interference checking function and the Boolean calculation.	EM	EDIT MOLDABLE PART / Edits a moldable part.
RE	RELEASE / Assigns a release of specified degrees of freedom to a selected beam in a structure.	BR	BOUNDED RUNOFF SURFACE / Creates a runoff surface.	ES	USE EXISTING SURFACE / Creates, edits, or deletes the existing patching or runoff surface.
RL	RIGID LINK / Enables you to define a rigid link between selected nodes in a frame structure.	CC	COOLING CHANNEL CHECK / Checks cooling channels for safety, interference, and distance between cooling system segments.*	ET	EXTEND RUNOFF SURFACE / Extends runoff surface.
S	SIMULATE / Runs a simulation.	CC	PLACE CORE AND CAVITY / Places or deletes imported core and cavity.*	F	FINISH CORE/CAVITY / Activates core and cavity environment.
X	FIXED CONSTRAINT / Applies a fixed constraint on selected faces, edges, or vertices.	CD	CORE/CAVITY / Core/Cavity design and analysis environment.	GC	GENERATE CORE AND CAVITY / Creates the required files for the core and cavity.
		CH	COOLING CHANNEL / Creates a cooling channel.*	GP	GATE LOCATION / Sets gate locations.
		CH	CREATE HEEL / Creates one or more heels on an insert.*	GT	GATE / Adds a gate.
		CI	CREATE INSERT / Creates an insert.	JM	JOB MANAGER / Monitors the progress of analyses and, if necessary, stops an analysis.
		CM	COMBINE CORES AND CAVITIES / Creates, edits, or deletes a combined core or cavity.	LA	LIFTER / Places a lifter assembly into the mold so the mold can open and close smoothly.
2D	2D DRAWING / Creates one or more drawing documents.	CP	PLACE CORE PIN / Places a core pin into a mold.	LR	LOCATING RING / Creates a locating ring.
AM	ANIMATE RESULTS / Animates the selected simulation results.	CS	COOLING COMPONENT / Specifies the components that conduct the coolant through the cooling channels.	MB	MOLD BASE / Provides the tools to create a mold base.
AO	ADJUST ORIENTATION / Prompts the Adjust Orientation dialog box.	CW	COLD WELL / Defines the cold wells that are at the end of the sprue or on a runner.	MF	MOLD FILL ANALYSIS / Predicts the thermoplastic polymer flow inside the mold during the filling phase.
AP	ADJUST POSITION / Prompts the Adjust Position dialog box.	DW	DEFINE WORKPIECE SETTING / Enables you to generate a rectangular or cylindrical workpiece, which is the precondition for generating the core and cavity.	MP	PART PROCESS SETTINGS / Determines the optimum mold temperature, melt temperature, and injection time based on the selected material and part geometry.
AR	AUTO RUNNER SKETCH / Creates an auto runner sketch.				
AU	MOLD BASE AUTHOR / Assigns component attributes before inserting a user defined mold base.				

Mold Design

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

MS	MANUAL SKETCH / Activates the sketch environment of a part where you can draw an insert sketch.
NM	CREATE MOLD DESIGN / Creates mold design.
PF	PART FILL ANALYSIS / Reveals information about the flow of polymer through parts.
PH	CREATE PLANAR PITCH / Creates planar pitch.
PI	PLACE INSERT / Places a previously generated insert in the mold assembly.
PP	PLASTIC PART/ Places one or more parts into a Mold Design project.
PR	SET PLOT PROPERTY / Sets plot property.
PS	CREATE PATCHING SURFACE / Creates patching surface.*
PS	MOLD PROCESS SETTINGS / Opens mold process settings.*
PT	PATTERN / Duplicates one plastic part and arranges the resulting occurrences in a rectangular, circular, or variable pattern.
RN	RUNNER / Creates a runner.
RR	RADIATE RUNOFF SURFACE / Creates, edits, or deletes a radiated runoff surface.
RS	CREATE RUNOFF SURFACE / Creates a runoff surface.
SA	SLIDER / Creates a standard slider.
SB	SPRUE BUSHING / Creates a custom or vendor sprue bushing.

SK	MOLD SHRINKAGE / Estimates the percentage of shrinkage that occurs based on the mold dimensions.*
SK	PART SHRINKAGE / Estimates the percentage of shrinkage on an individual part.*
SL	LOCK SET / Creates a side lock or an interlock.
SM	SELECT MATERIAL / Selects material.
SP	SECONDARY SPRUE / Provides the means to add a new secondary sprue to the mold design and to edit, delete, and adjust the dimensions of the secondary sprue.
UM	USER MOLD BASE / Places a user-defined mold base.
WP	WORKPIECE POCKET / Creates pockets for a rectangular workpiece.

Part

1	TOGGLE SMOOTH / Activates the toggle smooth command.
E	EDIT FORM / Edits an existing form to add, remove, or modify controls.

Placed Features

CH	CHAMFER / Creates a chamfer.
DE	DIRECT EDIT / Allows you to make quick edits to existing solids.

EF	END FILL / Adds a weld end fill annotation in a drawing view or on a 3D weld bead to represent the hatched or filled region indicating the end of a weld bead.
F	FILLET / Creates a fillet in part and assembly files.
GW	GROOVE WELD / Creates a groove weld feature in a weldment assembly that connects two face sets with a solid weld bead.
MI	MIRROR / Creates a mirror feature.
Q	CREATE IMATE / Displays the Create iMate dialog box, for developing iMates.
RP	RECTANGULAR PATTERN / Creates rectangular pattern of feature.
S	2D SKETCH / Activates the 2D Sketch command.
S3	NEW SKETCH / Activates the 3D Sketch command.
SH	SHELL / Removes material from a part interior, creating a hollow cavity with walls of a specified thickness.
TH	THREAD / Creates threads in holes or on shafts, studs, or bolts.
W	FILLET / Activates the Fillet tool.
WS	WELDING SYMBOL / Provides annotation and acts as a grouping mechanism by referencing multiple beads with a single welding symbol.

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

Presentation

- CV CREATE VIEW / Adds a new presentation view.
- T TWEAK COMPONENTS / Tweaks components in a presentation.

Sheet Metal

- BE BEND / Creates a bend.
- CC CORNER CHAMFER / Activates the corner chamfer command.
- CF CONTOUR FLANGE / Creates a contour flange.
- CR CORNER ROUND / Adds fillets or rounds to one or more corners of a sheet metal part.
- CS CORNER SEAM / Defines the corner seams you add to sheet metal faces.
- FA FACE / Creates a sheet metal face.
- FO FOLD / Defines the fold in a sheet metal face along a sketched line that terminates at face edges.
- HEM HEM / Creates a folded hem along sheet metal edges.
- PT PUNCHTOOL / Defines the punch of a 3D shape into a sheet metal face.
- ST SHEET METAL DEFAULTS / Changes the options and parameters for the active sheet metal part from those options defined by the selected Sheet Metal Rule.

Sketch

- A BASELINE SET, ANIMATE, ARC / Activates the Baseline Set, Animate, or Arc tool, depending on the work environment.
- A3 THREE POINT ARC / Draws a three-point arc using dynamic input.
- AD AUTO DIMENSION / Prompts the Auto Dimension dialog box.
- BE BEND / Creates a bend.
- CE CENTER POINT CIRCLE / Draws a center point circle using dynamic input.
- CH CHAMFER / Creates a chamfer.
- CP CIRCULAR PATTERN / Creates circular pattern of sketch geometry.
- EL ELLIPSE / Creates an ellipse with a center point, a major axis, and a minor axis that you define.
- EX EXTEND / Makes surfaces larger in one or more directions.
- FI FILLET / Adds fillets or rounds to one or more edges of a part, between two face sets, or between three adjacent face sets.
- H FILL/HATCH SKETCH REGION / Hatches or color fills an enclosed boundary in a drawing sketch.
- I VERTICAL / Activates the vertical constraint tool.
- L LINE / Creates a line or arc.
- MI MIRROR / Mirrors sketch geometry about a selected plane.
- MO MOVE / Moves selected sketch geometry from point to point, or move a copy of the geometry.

- O OFFSET / Duplicates selected sketch geometry, and positions it an offset distance from the original.
- PO POINT, CENTER POINT / Sketches points and center points.
- POL POLYGON / Creates polygon shapes.
- REC TWO POINT RECTANGLE / Draws a two-point rectangle using dynamic input.
- REC3 THREE POINT RECTANGLE / Draws a three-point rectangle using dynamic input.
- RO ROTATE COMPONENT / Activates the Rotate Component command.
- RP RECTANGULAR PATTERN / Creates rectangular pattern of sketch geometry.
- SP SPLINE / Creates a spline.
- TC TANGENT CIRCLE / Creates circle tangent to three lines.
- X TRIM / Activates the Trim command.

Sketch Features

- BP BEND PART / Bends a portion of a part.
- E EXTRUDE / Extrudes a profile.
- H HOLE / Creates a hole in a feature.
- LO LOFT / Creates lofted features or bodies by blending multiple profiles into smooth shapes between the profiles or part faces.

R	REVOLVE / Revolves a sketch.	GR	GRAVITY LOAD / Creates a gravity load.
SW	SWEEP / Creates a sweep feature.	MAT	ASSIGN MATERIALS / Opens the assign materials dialogue box to assign materials to a component.
		MAX	MAXIMUM RESULT / Turns on and off the display of the point of maximum result in the mode.
		MC	MANUAL CONTACT / Adds manual contact conditions to selected geometry elements.
A	ANIMATE RESULTS / Animates the selected simulation results.	MIN	MINIMUM RESULT / Turns on and off the display of the point of minimum result in the model.
AC	AUTOMATIC CONTACTS / Compares automatic contacts.	ML	LOCAL MESH CONTROL / Adds a local mesh control.
BC	BOUNDARY CONDITIONS / Toggles display of all boundary conditions.	MO	MOMENT LOAD / Applies a load of the specified magnitude around the axis and perpendicular to the face.
BE	BEARING LOAD / Applies a bearing load to a full or partial cylindrical surface.	MS	MESH SETTINGS / Specifies the mesh sizing and coarseness.
BO	BODY LOAD / Defines angular velocity or angular or linear acceleration for the model.	MV	MESH VIEW / Displays the element mesh used in the solution with the result contours. Also displays the mesh over the undeformed model.
CC	COLOR BAR / Displays the Color Bar settings dialog box where you adjust the color bar display parameters.	N	CREATE SIMULATION / Creates new simulation.
CF	FIXED CONSTRAINT / Applies a fixed constraint on selected faces, edges, or vertices.	NP	NO SHADING / Turns off the Shaded Results display.
CP	CONVERGENCE PLOT / Displays the plot within a dialog box.*	P	PROBE / Activates the Probe command. You place probes as needed in areas of interest to display the stress values for that point.
CP	PIN CONSTRAINT / Sets the pinned constraint origin and offset.*	PL	PROBE LABELS / Toggles the visibility of probe labels.
CS	FRICTIONLESS CONSTRAINT / Applies a frictionless constraint on selected faces.	PR	PRESSURE LOAD / Pressure load.
CT	CONTOUR SHADING / Displays color changes using a strict banding between colors.		
FO	FORCE LOAD / Applies a force of the specified magnitude to the selected faces, edges, or vertices.		

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

R	REPORT / Generates a report.
RF	REMOTE FORCE LOAD / Applies a force of the specified magnitude to the selected face.
S	SIMULATE / Runs a simulation.
SC	RESULT DISPLACEMENT SCALE / Adjusts displacement scale.
SET	STRESS ANALYSIS SETTINGS / Activates the stress analysis settings dialog box.
SM	SMOOTH SHADING / Displays color changes using a blended transition.
SS	SAME SCALE / Maintains the same scale while viewing different results.
T	PARAMETRIC TABLE / Accesses the parametric table to specify design constraints and parameter ranges.

Tools

LA	EDIT LAYERS / Specifies a layer name and attributes for common display properties of drawing objects.
M	MEASURE DISTANCE / Opens the Measure Distance window.
OP	APPLICATION OPTIONS / Opens the Application Options settings.
SE	EDIT STYLES / Style and Standard Editor.

Tube & Pipe


AT	TUBE & PIPE AUTHORIZING / Authors an iPart or a normal part for publishing to the Content Center Library.
CF	CONNECT FITTINGS / Connects existing fittings.
DR	DERIVED MOTION / Creates or edits a derived route.
ES	EDIT BASE SKETCH / Edits the base 3D sketch.
HL	HOSE LENGTH / Edits hose length by changing end tangency weights.
IG	INCLUDE GEOMETRY / Introduces reference geometry to the route sketch.
IN	INSERT NODE / Inserts route node into segment.
IO	ISOGEN OUTPUT / Saves a file with a specified name and ISOGEN file type.
MN	MOVE NODE / Drags node to a new location.
MS	MOVE SEGMENT / Drags segment to a new location.
NR	NEW ROUTE / Adds new rigid piping and bent tubing routes to a pipe run.
PF	PLACE FITTING / Picks up a fitting from your project work space to place into the active run.
PR	CREATE PIPE RUN / Creates pipe run.*
PR	POPULATE ROUTE / Populates route.*
RT	ROUTE / Starts or continues route definition.

ST	TUBE AND PIPE STYLES / Copies and modifies existing style definitions and delete styles you no longer use.
WT	GROUNDING WORK POINT / Grounded Work Point.

View

ORBIT	FREE ORBIT / Rotates a model about the center of the screen or about axes in model space.
PAN	PAN / Pans the view.
VC	VIEWCUBE / Toggles the view of the ViewCube.
Z	ZOOM WINDOW / Zooms in on a specified area.

*NOTE: The same alias can perform different commands depending on the design environment and object you are working on.

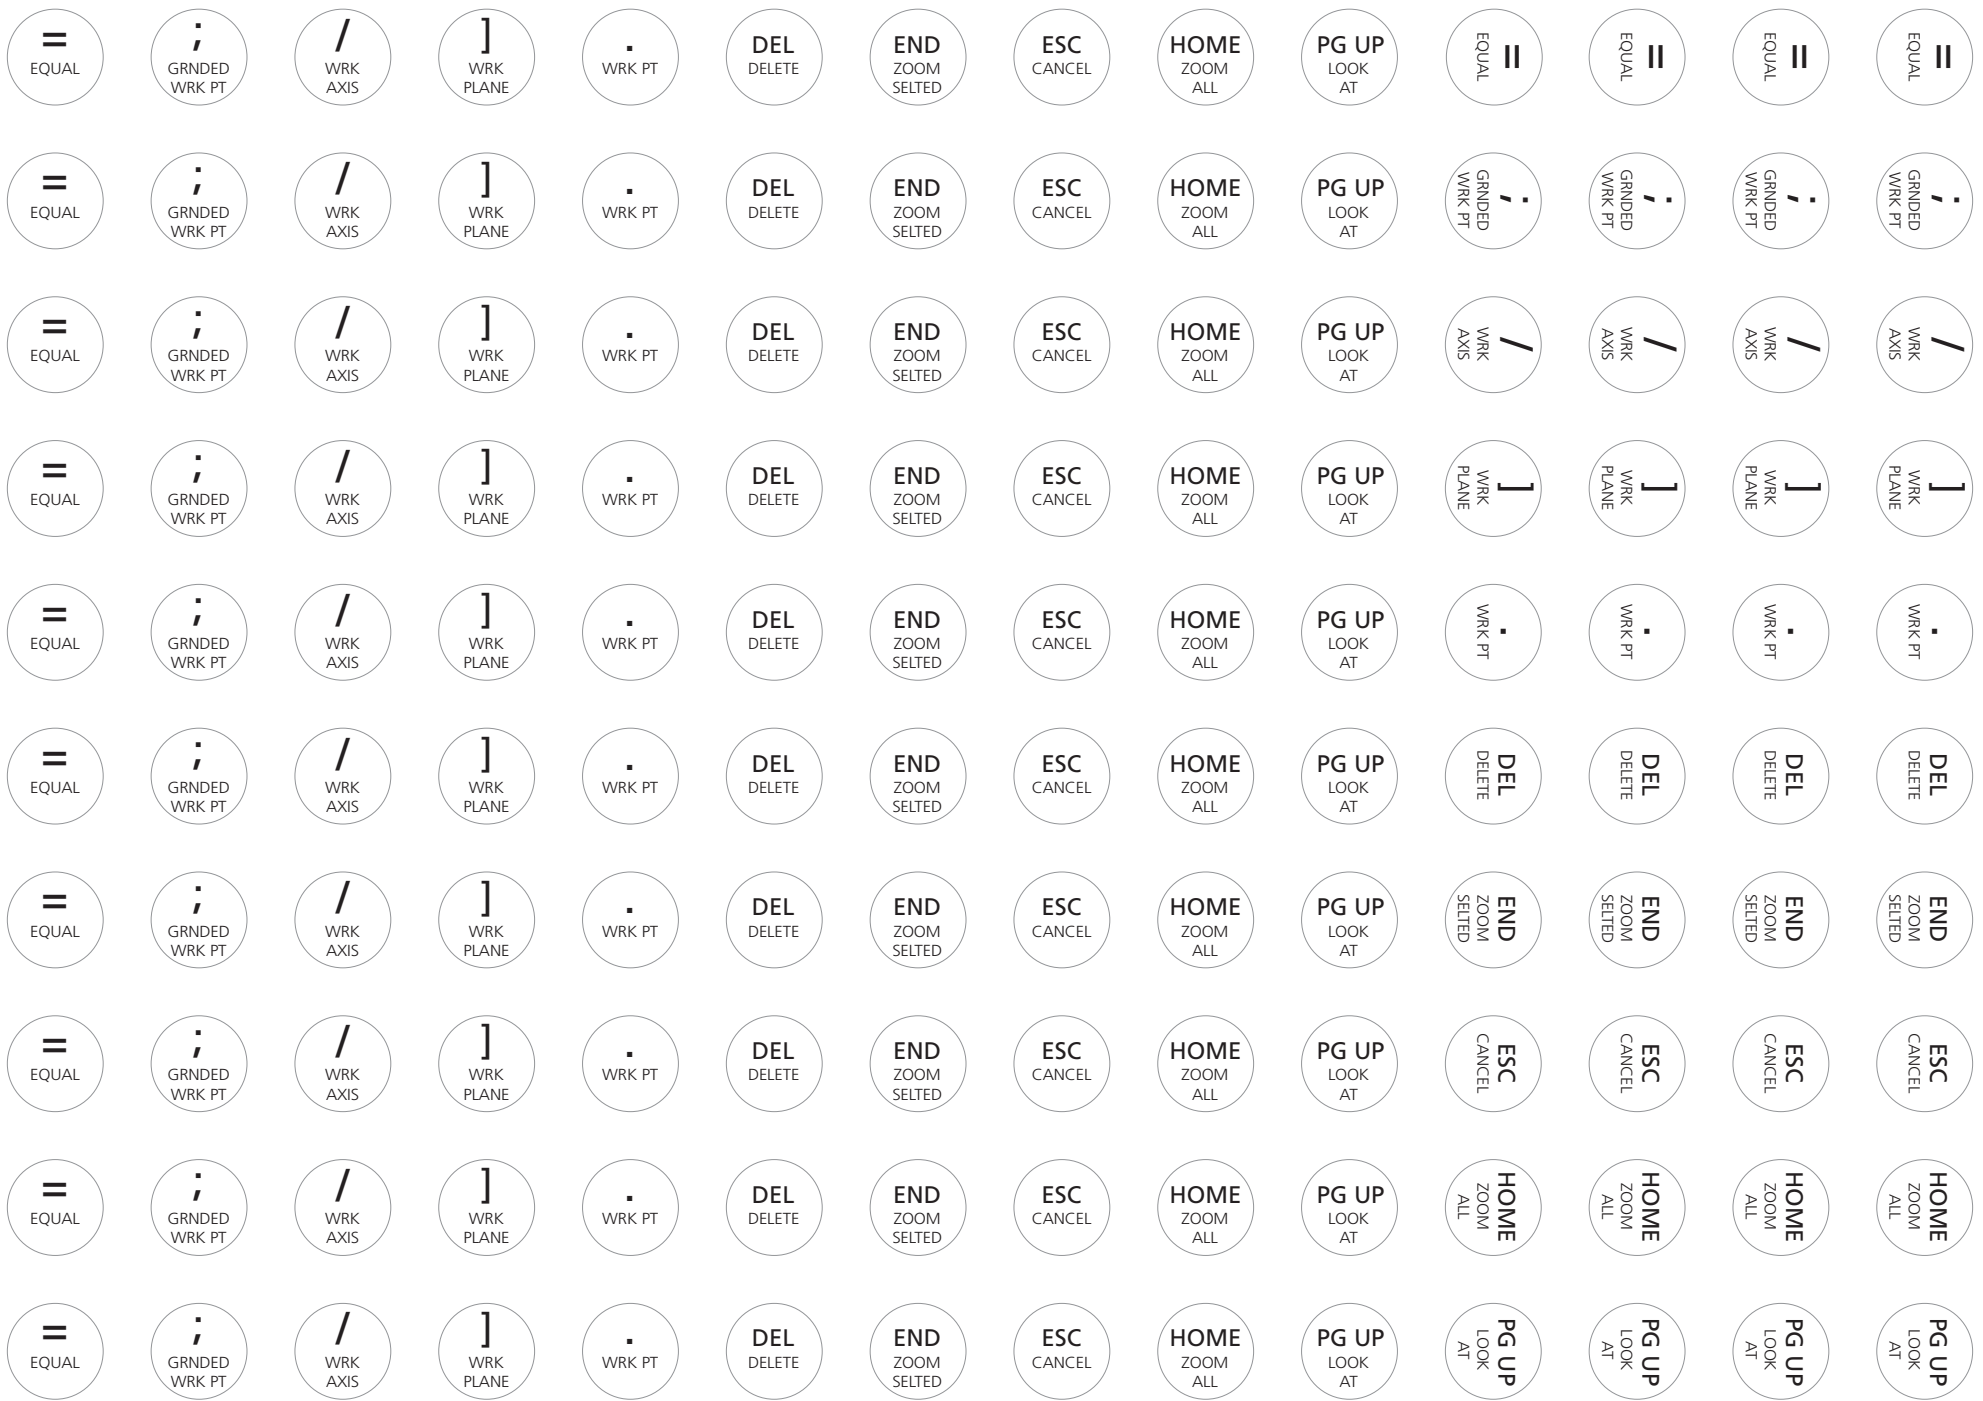

PRINTABLE KEYBOARD STICKERS [14 COMPLETE SETS]
FOR USE WITH: <http://www.onlinelabels.com/OL32.htm>